


Parts List

Model #CP-204 Pump

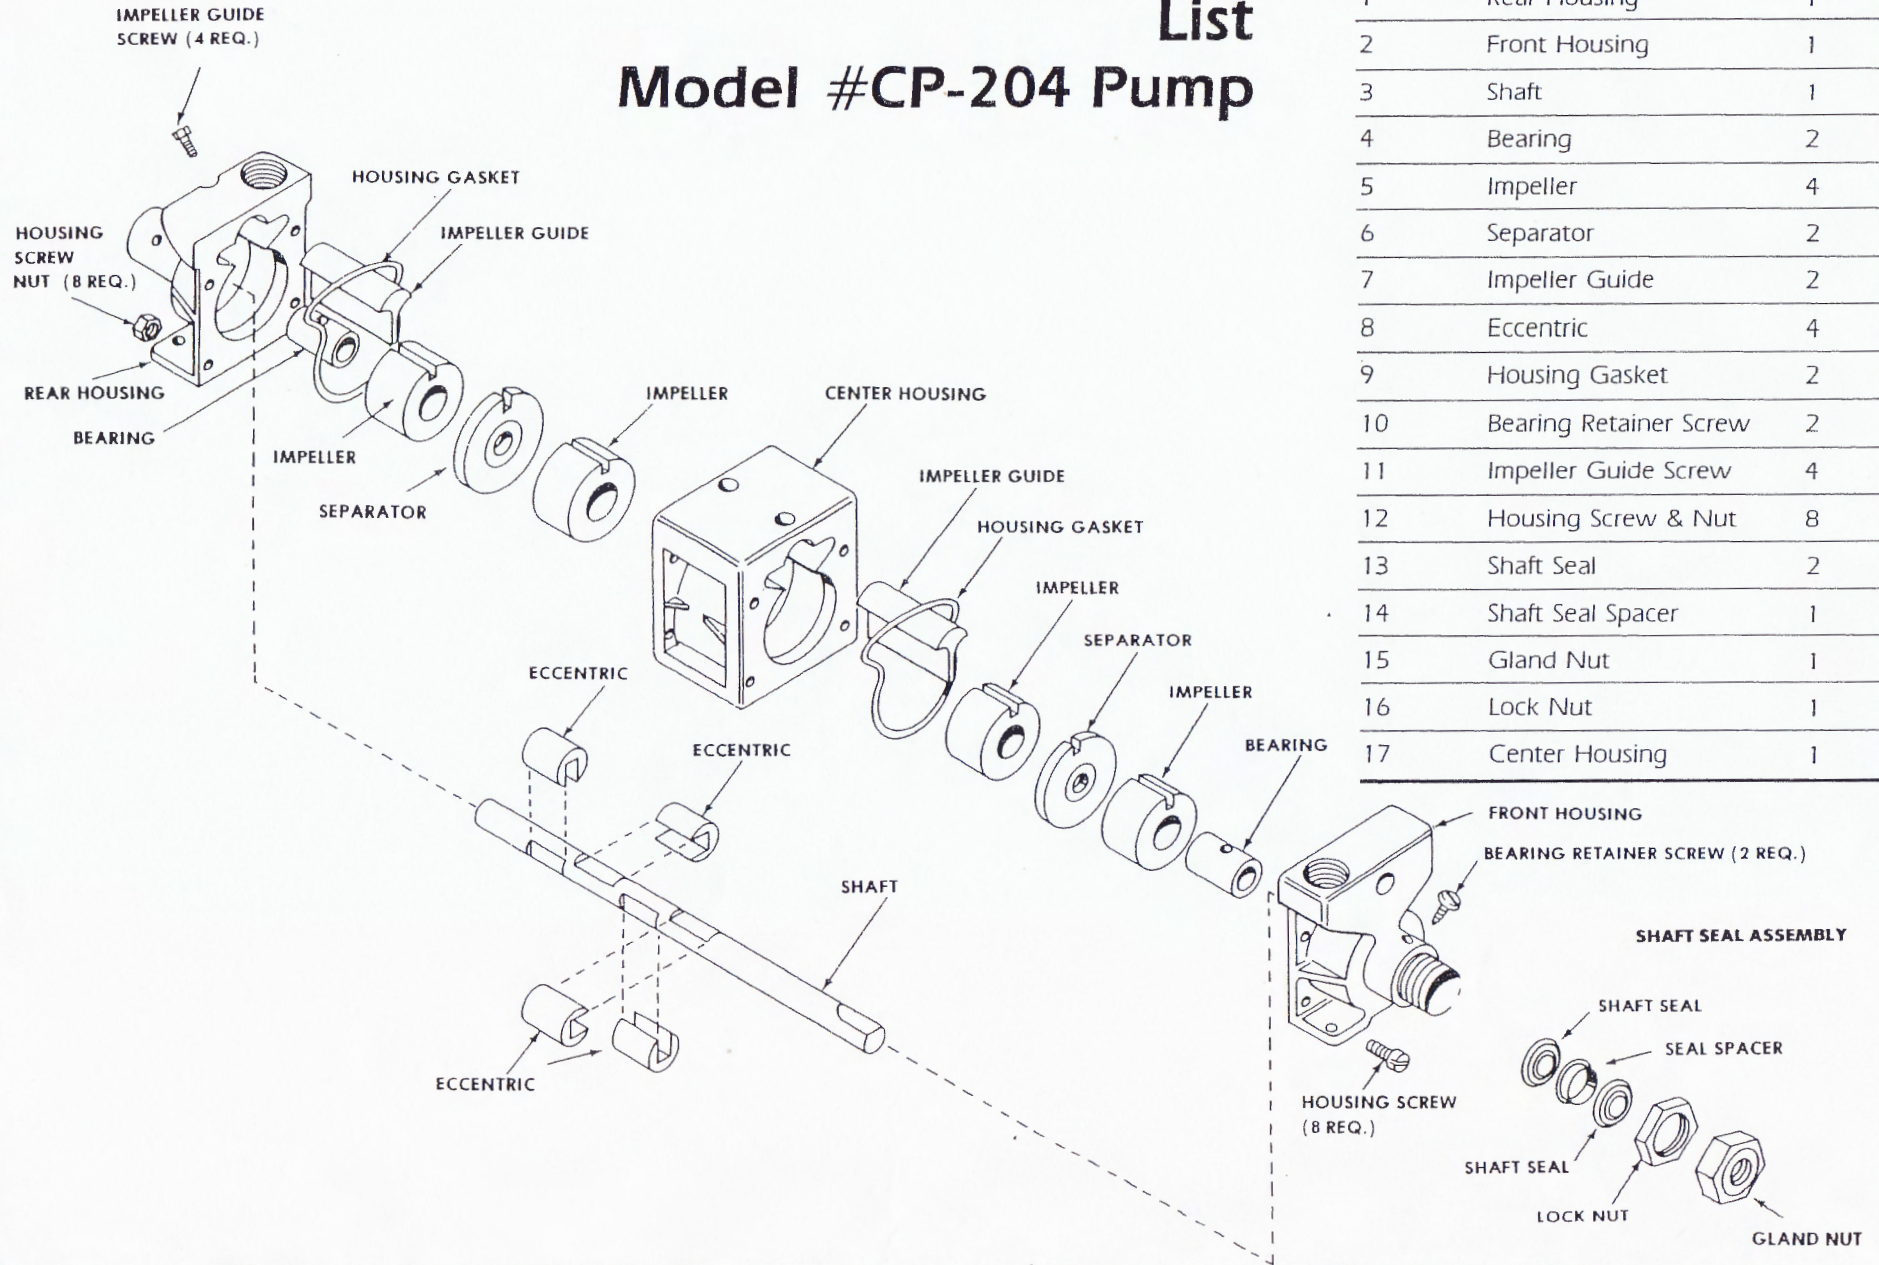

| Part Number | Description | Amount Required |
|-------------|------------------------|-----------------|
| 1 | Rear Housing | 1 |
| 2 | Front Housing | 1 |
| 3 | Shaft | 1 |
| 4 | Bearing | 2 |
| 5 | Impeller | 4 |
| 6 | Separator | 2 |
| 7 | Impeller Guide | 2 |
| 8 | Eccentric | 4 |
| 9 | Housing Gasket | 2 |
| 10 | Bearing Retainer Screw | 2 |
| 11 | Impeller Guide Screw | 4 |
| 12 | Housing Screw & Nut | 8 |
| 13 | Shaft Seal | 2 |
| 14 | Shaft Seal Spacer | 1 |
| 15 | Gland Nut | 1 |
| 16 | Lock Nut | 1 |
| 17 | Center Housing | 1 |