


Despiece - Diagram

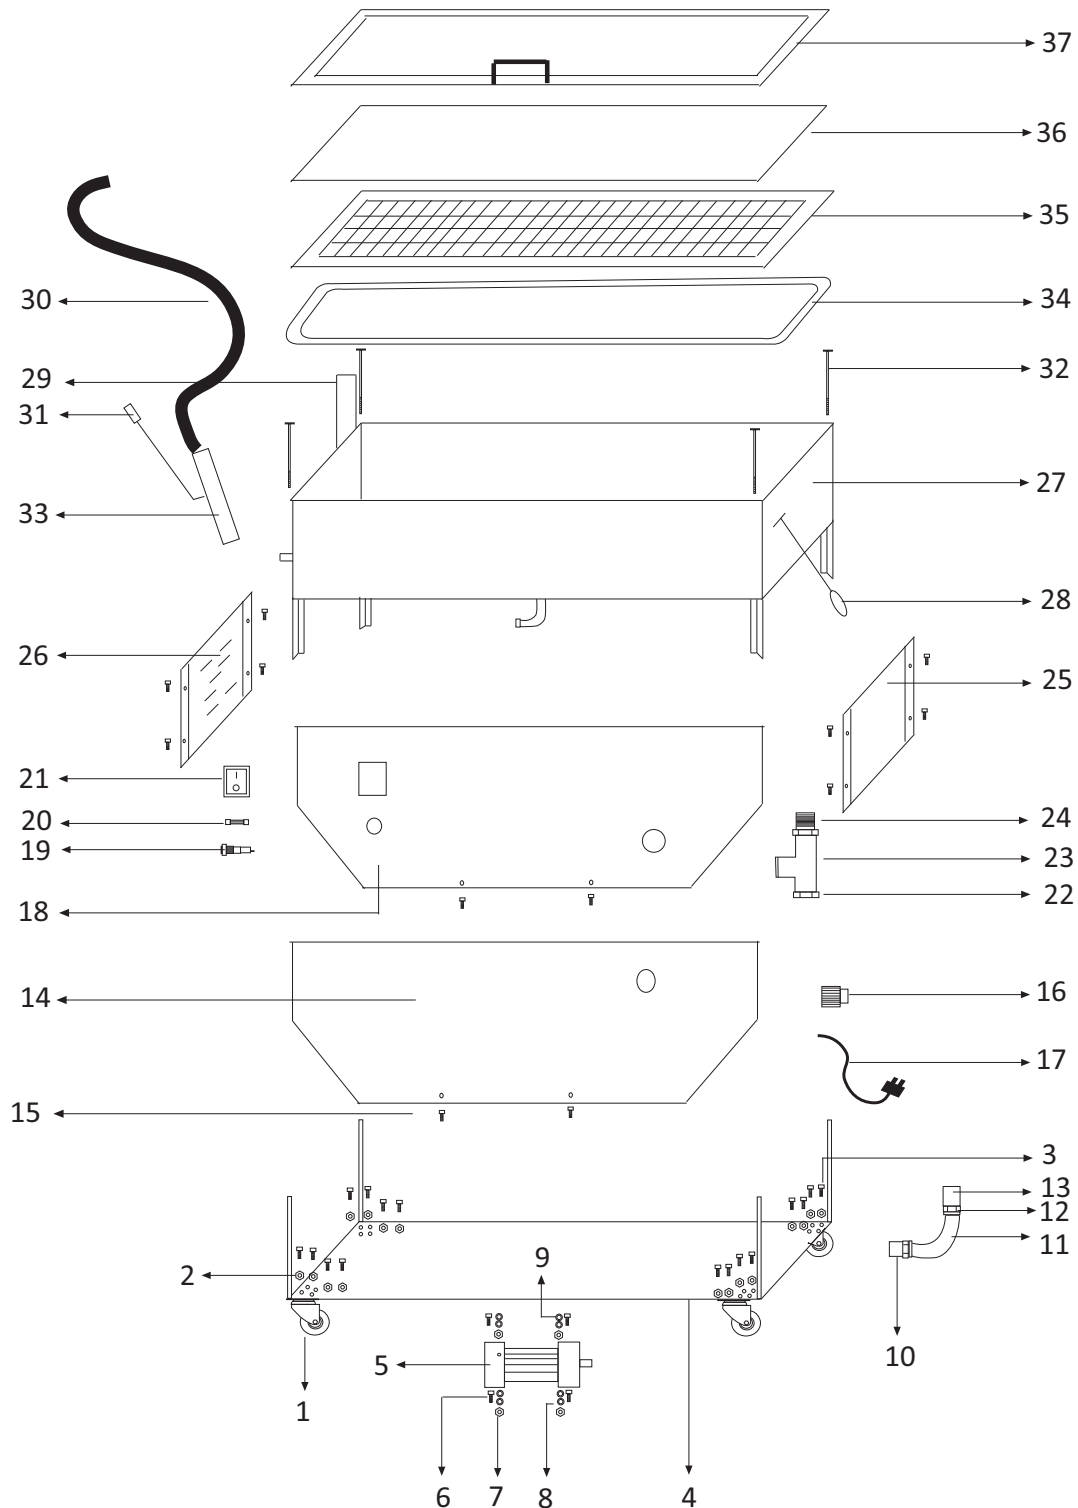

Ref.	Nº	Repuesto	Spare Part	Price
sf5000-001	1	Rueda	Wheel	
sf5000-002	2	Tuerca M6	Nut M6	
sf5000-003	3	Tornillo M6*10	Screw M6*10	
sf5000-004	4	Cámara inferior	Lower chamber	
sf5000-005	5	Motor	Motor	
sf5000-006	6	Tornillo M8*20	Screw M8*20	
sf5000-007	7	Tuerca M8	Nut M8	
sf5000-008	8	Arandela grower M8	Grower washer M8	
sf5000-009	9	Arandela M8	Washer M8	
sf5000-010	10	Reducción	Reduction	
sf5000-011	11	Manguera motor	Motor hose	
sf5000-012	12	Reducción	Reduction	
sf5000-013	13	Manguito	Sleeve	
sf5000-014	14	Cubierta trasera	Back cover	
sf5000-015	15	Tornillo M5*10	Screw M5*10	
sf5000-016	16	Cubierta cable de red	Network cable cover	
sf5000-017	17	Cable de red	Network cable	
sf5000-018	18	Cubierta delantera	Front cover	
sf5000-019	19	Portafusible	Fuse holder	
sf5000-020	20	Fusible	Fuse	
sf5000-021	21	Interruptor	Switch	
sf5000-022	22	Tapón	Cap	
sf5000-023	23	Tubo T	T tube	
sf5000-024	24	Reducción	Reduction	
sf5000-025	25	Cubierta derecha	Right cover	
sf5000-026	26	Cubierta izquierda	Left cover	
sf5000-027	27	Cámara superior	Upper chamber	
sf5000-028	28	Bola del asa	Handle ball	
sf5000-029	29	Soporte manguera	Base hose	
sf5000-030	30	Manguera	Hose	
sf5000-031	31	Bola de la manguera	Hose ball	
sf5000-032	32	Varilla inoxidable	Inox stick	
sf5000-033	33	Salida de la manguera	Hose outlet	
sf5000-034	34	Goma filtro	Filter rubber	
sf5000-035	35	Filtro inoxidable	Inox filter	
sf5000-036	36	Filtro	Filter	
sf5000-036a		Filtro carbono	Carbon filter	
sf5000-037	37	Marco inoxidable	Inox frame	