

Original IR 17 HighTech curing with 17 needles

www.cmmachineservices.net

In the process of upgrading the curing injector, we have used more than 35 years of experience to good use. No technological advantage has gone unexplored. The result is the Original IR 17 - a more precise, more powerful and more efficient machine with 17 needles.



Single-needle control

As soon as a needle encounters the surface of the meat, the liquid intake opens. If the needle hits bone, the liquid intake closes to prevent too much liquid accumulating at one location. When a needle pierces the meat without meeting bone resistance, it injects until the needle exits the underside of the meat. In this way, the brine is evenly distributed throughout the piece of meat.






Stable belt and high throughput

Extraordinarily high throughput enables the Original IR 17 to fully automatically inject even large suckling pigs or whole turkeys. The precise forward feed of the product is done by a very stable, lightweight wire mesh belt that is easy to clean. The open wire mesh ensures that the draining brine remains inside the machine and is not wasted.

FD

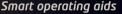

An inlet feed ramp set at an angle serves as a chute for tipping in meat. When positioned flat, the ramp can be used as a work surface. For example, bins can be deposited on the surface to feed the meat onto the belt with minimum effort. The machine is built to accommodate standard trolley height, and the operating controls are easily within reach.




Perfect brine by means of jet pumps

A strong jet leads to perfectly seasoned brine in just one minute. It distributes all the spices and ingredients equally in the water and dissolves them perfectly. A weaker jet maintains the result of mixing during the injection process, keeping the spices and ingredients evenly distributed throughout the curing cycle. As the spices are kept constantly suspended, the meat is uniformly seasoned.

Superior hygiene

Every part of this machine has been designed for fast cleaning. There are no hard-to-access corners. Much consideration has also been given to hygiene areas that are not visible. The curing injector drains completely following operation or cleaning. The machine can be cleaned, dried and easily stored away in no time.

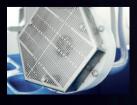

A versatile rotary pump

Built as a centrifugal pump, this apparatus is genuinely versatile. The pump works at low pulsation and is self-priming, dry-run safe and self-draining up to the last drop. The quick-suctioning geometry of the pump wheel enables air removal, thus improving the brine. Consequently, full pressure is available at the needles from the first stroke in the selection range of between 0.3 to 4.2 bars, which in turn enables accurate injection volumes from 3% to 60%.

Original IR 17 summary

Equipment		Technical specificati	ons	
Touch-PC control	\checkmark	Machine height	1.850 mm	
Process diagnostics system		Machine length	930 mm	
Variable operating speeds	\checkmark	Machine width	580 mm	
Single-needle control	\checkmark	Machine weight	250 kg	
Stainless steel XXL impeller pump	\checkmark	Connected load	400 V, 6,1 kW, 16 A	
Rotary pump	\checkmark	Performance	1.500 kg/h	
Softer		Injection rate	23 mm	
Stainless steel belt with grip ridges	\checkmark	Belt width	250 mm	
Welded machine construction	\checkmark	Rows of needles	2	
Cleaning assistant		Feed inlet height	280 mm	
Automatic belt fastening		Injection volume	3 - 60 %	
Feed system	\checkmark	Pressure	0,5 - 4,2 bar	
Standard trolley clearance				
Fold-away workspace	\checkmark			
Hand injector		Standard trolley (200 lt), blue		

.

Remarkably precise liquid distribution significantly increases yields in meat. Even high injection volumes of up to 60% are distributed virtually invisibly. This injector produces both cured meat products and fresh meat with no discolouration. The injection accuracy is within 0.5% and 3 litres of brine is sufficient for the machine to operate.



The single needle control means that the cycle uses only as much brine as necessary. This ensures optimum quality particularly in fish, as it is very difficult for microbes to be transmitted from one fish to the other. Owing to the precise distribution of liquid over the fish, quality is preserved even at low injection volumes and remains constant throughout.







• Installing the machine












Operation

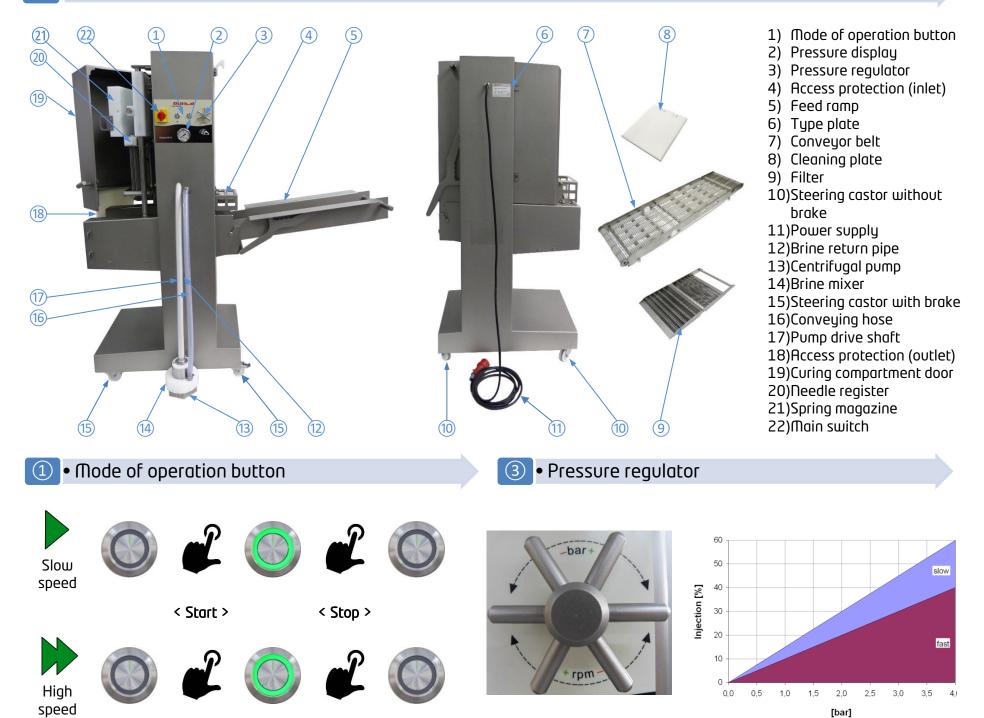



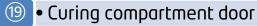

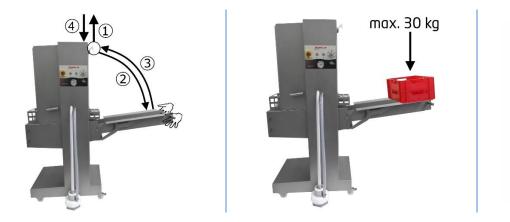






Rühle GmbH, Beim Signauer Schachen 10, D-79865 Grafenhausen Tel.: +49 7748-523-11, Fax: +49 7748-523-8511

www.original-rvehle.de






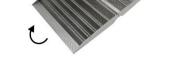







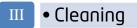



IR 17 Copyright © 2018 by Rühle GmbH 15.06.2018